




Height/Diameter Gauge complete with Calibration Jig in place



Calibration Jig

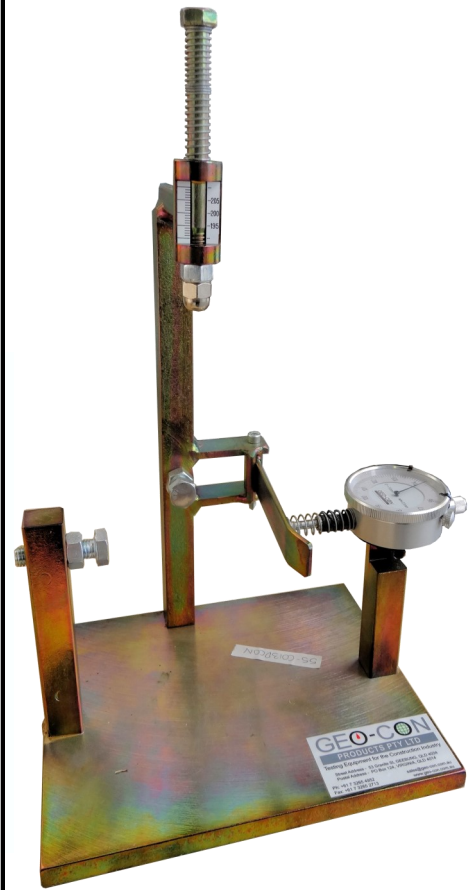

Height/Diameter Gauge without Calibration Jig

The plunger is pushed down onto the sample (in this case the Calibration Jig) and the height is read directly off the indicator)



Diameter is read directly off the dial gauge (the picture shows the Calibration Jig in place and the Dial is set to read a diameter of 100mm)

